

FR5300 UR-FR5300 Error Messages

| FR5300 Screen | Error Message | Resolution |
|-------------------------------------|--|---|
| Main opening screen | <p>Simulcast Status: Communication Preparation is Ready</p> <p>NTP Status: Please configure NTP Settings</p> | NTP has to be setup and enabled in the Maintenance > Unix Time Settings screen. |
| Main opening screen | <p>Simulcast Status: Communication Preparation is Ready</p> <p>NTP Status: Link is Down</p> | NTP is setup and enabled in the Maintenance > Unix Time Settings screen, but there is no IP connection to allow the repeater to access the target NTP site. |
| Maintenance > Information | Number of Satellites 0 | The GPS antenna is not connected or functioning. |
| Maintenance > Information | Repeater Status Error TX Inhibit Err | The repeater and UC card must be updated to the latest firmware as stated on the kbase. |